



SPECIFICATIONS FOR DISPLAY MEASUREMENTS

hera

spectrometer


Hera-01 with lens: cost effective colour spectrometer for display measurements

The Hera-01 with lens is the ideal spectrometer for display measurements where ease of use, stability, performance and price are essential. A perfect solution for hassle free integration in production processes.



Highlights

- Spectral range 380-780nm
- Spectral output or color values output are both possible
- Autorange function
- Excellent linearity over entire dynamic range
- Dark current compensated, virtually zero over entire integration range
- Holographic grating for low stray light
- USBTMC compliant, SCPI command set, high speed device
- Numerous interfaces, ideal for system integration
- All spectral calculations are done inside
- Several lens system options
- Robust Housing

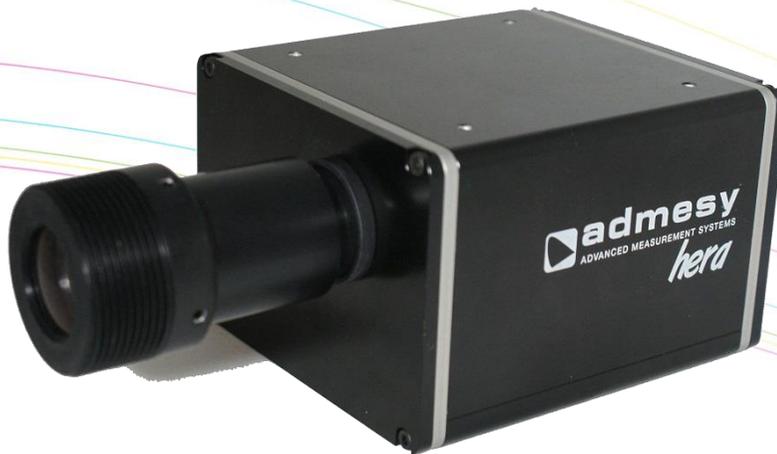

Speed & ease of use

Admesy strongly believes in developing and manufacturing devices where ease of use and speed are key factors. In order to achieve these aspects, Admesy considers the following aspects of spectrometers to be taken care of.

- Wavelength calibration
- Dark current
- Linearity
- Absolute calibration

Calculations and compensations are done in a staggering 14ms. All this is possible due to the high speed processor inside the Hera combined with algorithms developed for this specific device. In production processes, no external calculation power is needed from computers. Data can be used directly in production settings without any delay of processing data afterwards. This saves time and processing power of the operating system of a production line. Additional feature is the Hera's autorange function: the most ideal integration time is chosen automatically. Manually, the integration time can be changed.

General specification Hera-01

Hera 01	
Model	Hera 01 – VIS
Spectral range	380-780nm
Optical resolution (FWHM)	2.3nm
Order sorting filter	2 nd order sorting filter
Wavelength accuracy	+/- 0.5nm
Stray light	<0.03%
Luminance accuracy ^{*2}	+/-4%
Chromaticity accuracy ^{*2}	+/- 0.002
Non - Linearity	< 1%
Integration time	2.5ms – 20s
Spectral resolution	Selectable 0.5nm-1nm-2.5nm-5nm-10nm
Interfaces	High speed USB, RS232, Ethernet, Trigger connections
Measurement parameters	Spectral output, radiometric data or color data (Lumen, x,y, dwl, pwl CRI etc.)
Data processing time	14ms
Size (HxWxD)	100 x 80 x 55 mm (without lens system)
Weight	0.35 kg (without lens system)
Operating temperature	10-35°C
Power consumption	1250mW (USB powered)
Luminance range	0.3-1500 cd/m ²
Wavelength accuracy	+/-0.5nm
Luminance accuracy (measured at standard illuminant A)	+/-4%
Colour accuracy (measured at standard illuminant A)	+/-0.002



Hera lens and fiber specifications

The Hera series is available with several lens systems, available as fixed optics and optics with fibers. For fiber connections, Admesy uses M8 connectors. This connector has been developed to connect the optical fiber in a consistent way to ensure the best possible repeatability.

5, 10, 20mm lens systems			
Model	1	2	3
Description	20mm lens	10mm lens	5mm lens
Target	Display	Display	Display
FOV ¹	N/a	N/a	N/a
Acceptance angle	+/-0.3°	+/-0.3°	+/-0.3°
Luminance range (cd/m ²)	0.05-6000	TBD	TBD
Working distance (WD)	100mm	TBD	TBD
Spot size at WD	21mm	TBD	TBD
Spot size at WD - 50mm	20.5mm	TBD	TBD
Spot size at WD +50mm	21.5mm	TBD	TBD

IDMS, VMS systems		
Model	4	5
Description	IDMS	VMS
Target	Display	Variable message signs
FOV ¹	+/-1°	+/-1.5°
Acceptance angle	+/-1°	+/-0.5°
Luminance range (cd/m ²)	TBD	TBD
Working distance (WD)	TBD	TBD
Spot size at WD	TBD	TBD
Spot size at WD - 50mm	TBD	TBD
Spot size at WD +50mm	TBD	TBD

¹ Models 1, 2 and 3 are collimating lens systems and can be used closely to the display.



Speed & performance, Hera-01 20mm

Measurement parameters	
Used target display	LCD display with LED backlight
Spectral resolution	1nm
Average	1
Autorange function	Off
Temperature	24°

Repeatability ^{1 2}			
Luminance level	Luminance (2 sigma)	Colour (2 sigma)	Measurement time (ms)
250 cd/m ²	<0.3%	+/- 0.0005	50
10 cd/m ²	<0.5%	+/- 0.0005	1000
1 cd/m ²	<3%	+/- 0.002	2000
0.25 cd/m ²	<3%	+/- 0.002	5000

1 Speed and repeatability are directly related to each other; a lower repeatability can increase speed and vice versa.

2 Measurements are real life taken measurement and can vary slightly from device to device.



Admesy B.V.
Branskamp 5
6014 CB Ittervoort
The Netherlands

T +31 (0)475 600 232
F +31 (0)475 600 316

www.admesy.com
info@admesy.com

The material in this document is subject to change. No rights can be derived from the content of this document. All rights reserved. No part of this document may be reproduced, stored in a database or retrieval system, or published in any form or way, electronically, mechanically, by print, photo print, microfilm or any other means without prior written permission from the publisher.

